

Yamaha TW200 *Mountain Goat* Tow Hitch Installation Instructions



Required tools: 14mm socket wrench, metal cutting saw or grinder


Use the factory Yamaha service manual for instructions on removing and/or installing any and all factory parts on your TW. Refer to all safety precautions and fastener torque specs for safe and proper installation.

The install on this kit is pretty straight forward. Slide a pair of the $\frac{3}{8}$ " u bolts over each side of the swingarm from the inside out. Place the steel bar over the swingarm and insert the bolts into the holes, securing them, with the supplied $\frac{3}{8}$ " nuts.

On the left side make sure the u bolts are both between the two tabs on the swingarm that hold the upper chain guard.

The front u bolts should be located about $\frac{3}{16}$ " behind the end of the weld on the top of the swingarm on both sides as shown. Make sure the hitch is centered on the swingarm before final tightening.

For the initial install you will need to trim off the excess threads of the U-bolts using a saw or grinder. Due to supply issues we were unable to source a shorter U-bolt.

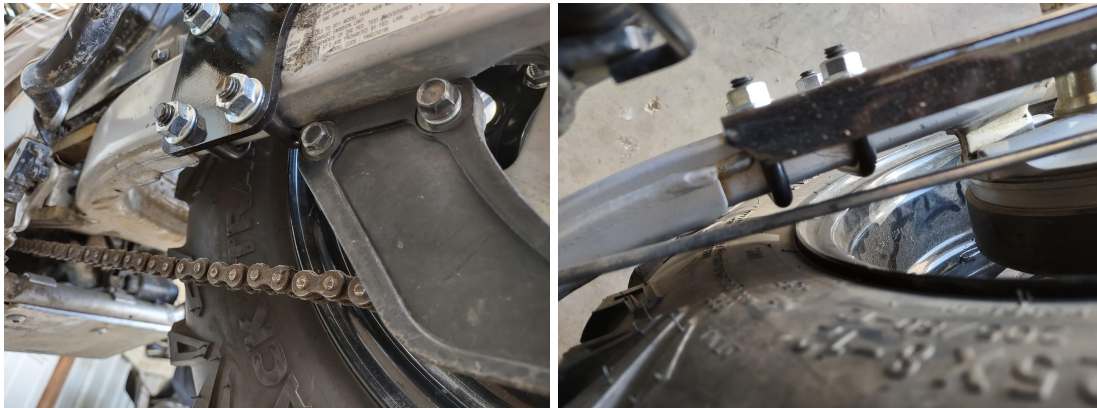

DISCLAIMER: COVINGTON MOTOR GROUP INC. WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES AND/OR EXPENSES IN CONNECTION WITH THE PURCHASE OR USE OF THIS PRODUCT.. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you.

NOT DOT approved for highway usage.